


How to connect the P003 adapter and ECU BENCH cables with OBDSTAR tablet devices

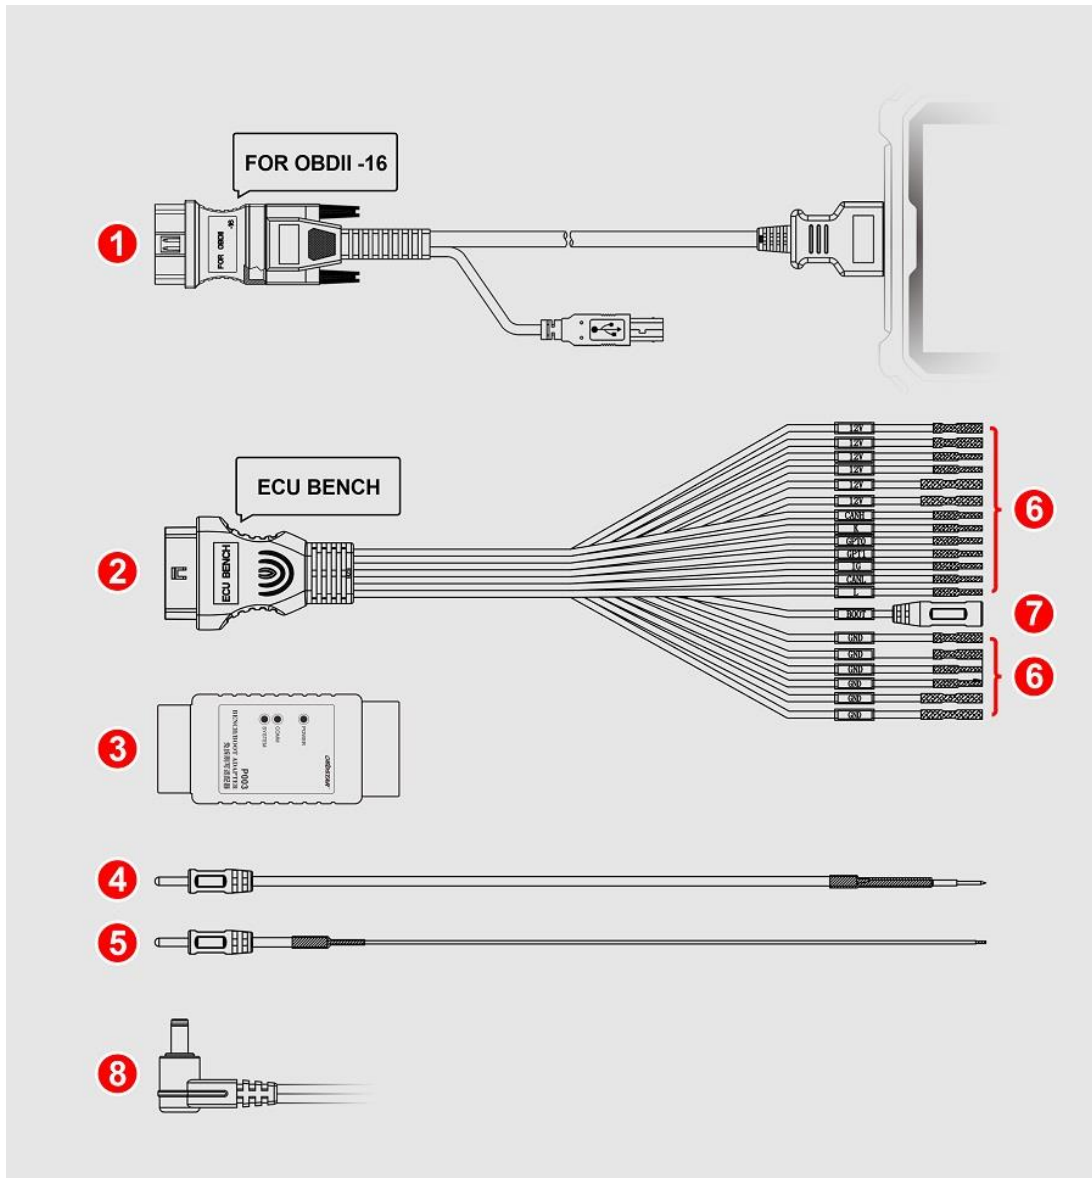

1. Diag cable OBD connector(male)
2. Connect P003 connector(female)
3. P003 adapter
4. Boot jumper(spring needle)
5. Boot jumper(welding)
6. ECU pin connector
7. ECU boot connector
8. 12V power

Bench Mode:

Step 1: Connect 1, 2, 3 together as pic below;


Step2: connect the ECU pin connector to the ECU according to the wiring diagram;

Step3: connect 12V power with diagnostic device;

Step4: read data

Boot Mode:

Step 1: Connect 1, 2, 3 together as pic below;

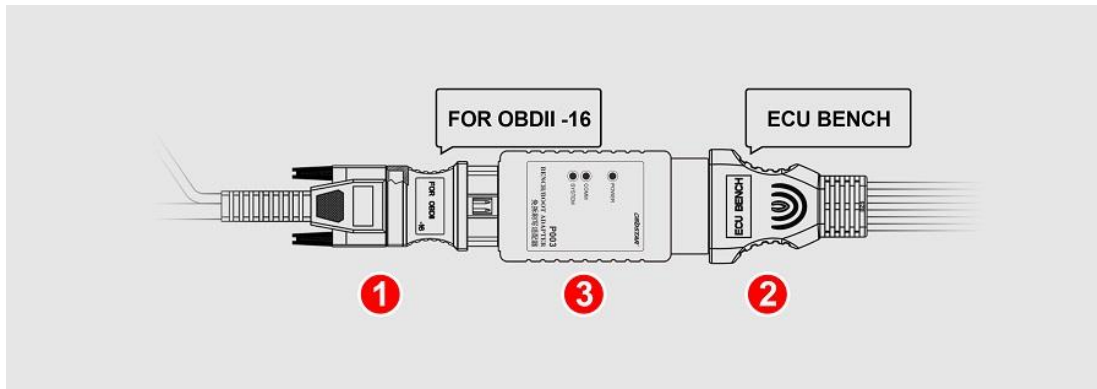

Step2: connect the ECU pin connector to the ECU according to the wiring diagram;

Step3: connect 7 with 4 or 5 and connect it to ECU;

Step4: connect 12V power with diagnostic device;

Step5: read data on diagnostic device.

Package List (work with X300 DP/ X300 DP PLUS/ X300 PRO4):

1pc x P003 adapter

1 set x ECU BENCH cables



Package List (work with DC706):

- 1pc x P003 adapter
- 1pc x ECU BENCH jumper
- 5pcs x 120 ohm resistors
- 1pc x Boot jumper(spring needle)
- 1pc x Boot jumper(welding)



Work with DC706